## **BROEN-LAB**

## Technical Information – TI6 – LAB

## Installation, Maintenance and Operation

## **Burning gas**



## **Product Information:**

Media:Burning gasesPressure range:0-7 bar (Attention; Check for local regulation)

### Mounting:

- Changes or modifications not to be made without approval from BROEN-LAB
- Unauthorized or improper usage can cause danger to the user and other persons and cause equipment damage.
- The equipment can only be used for burning gases.
- Consult the data sheet. Pay special attention to pressure and temperature range.
- Do not apply shock, vibration or other physical stresses to the equipment which can damage it.

# **BROEN-LAB**

## Installation:

## **BROEN-LAB UniFlex compression fittings:**

Please follow the guidelines and regulations in your country regarding the use of compression fittings. For installation of BROEN-LAB UniFlex compression fittings

please read BROEN-LAB installation manual 94G0140:



### **BROEN UniFlex hoses:**

Please follow the guidelines and regulations in your country, if this does not exist BROEN-LAB recommend following guidelines for burning gas hoses.

- 1. No joints are allowed on the hose between the supply and the fitting.
- 2. The hose shall be accessible for inspection in full length.

The hose shall be installed / placed so there are no possibilities for cuts and mechanical or heat damage. BROEN-LAB Installations rules 99G0013 is also to be used.

## INSTALLATION INSTRUCTIONS FOR BROEN-LAB Uniflex<sup>TM</sup> FLEXIBLE HOSES AND PIPES



## **BROEN-LAB**

## **Operation instruction:**

## Press/turn headwork and handle:

To open valves with press/turn handle, press down the yellow handle and turn it counter clock wise up to 90°. See fig 1.

## Needle flow headwork and handle:

To open valves with needle flow headwork, turn the handle counter clock wise up to 3x360°. See fig 2.

## Lift/turn valve and handle:

To open valves with lift/turn handle, pull up the yellow handle and turn it counter clock wise up to 90°. See fig 3.

## Quick coupling with detachable hose nozzle:

To detach the nozzle on valves with quick coupling first pull the sleeve on the coupling back, then pull the nozzle out. See fig 4.

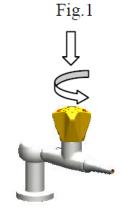






Fig.2







## Shut off Ballofix ball valve on BROEN Premium fittings:

To close the build in ball valve on Premium fittings, use hex 3mm Allen key and turn it 90°. See fig. 5.





#### Service and maintenance:

Fittings:

All parts in BROEN-LAB UniFlex burning gas fittings are fixed for security reasons and can therefore not be serviced.

By failure on the fitting is replacement the only option.

### Cleaning:

Cleaning of the fittings can be done with a soft, clean, damp, cloth and a mild liquid detergent. Do not use abrasive cleaners, powders, scouring pads, or steel wool, which will damage the finish.